
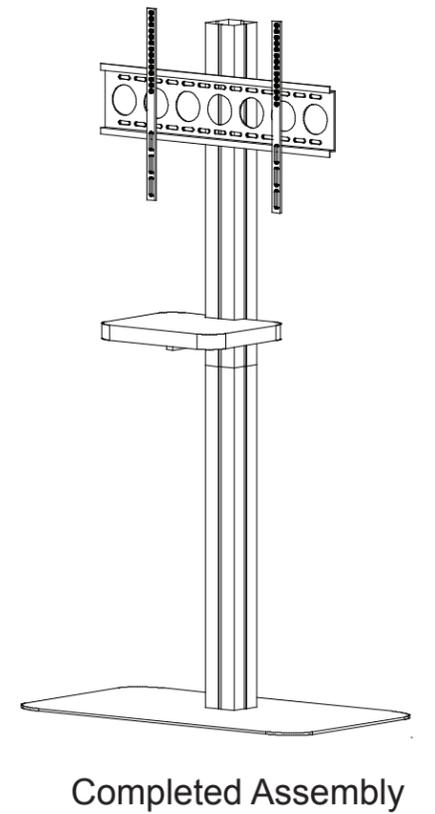
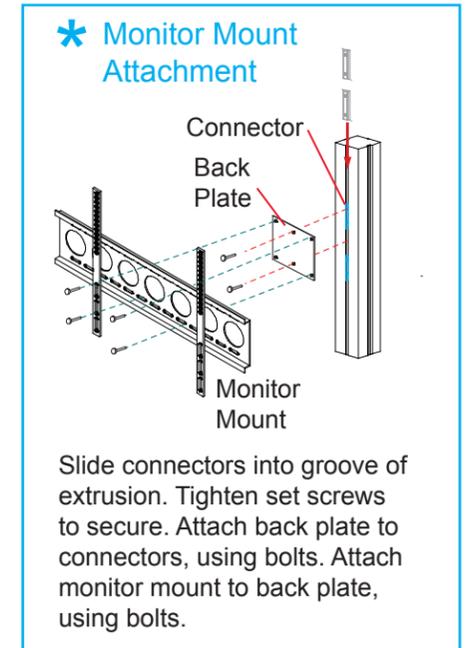
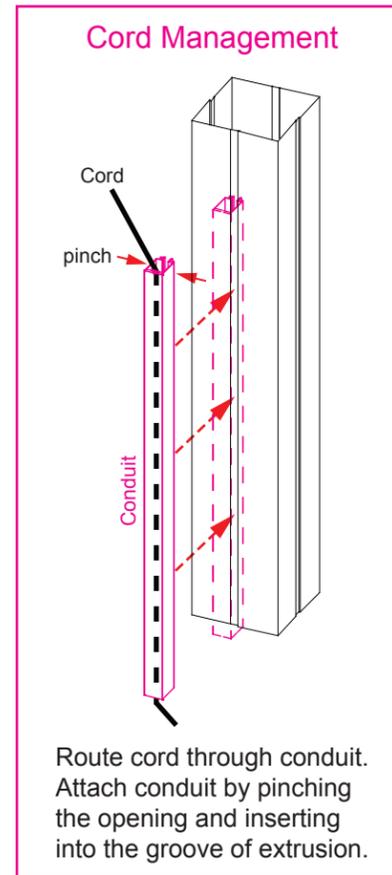
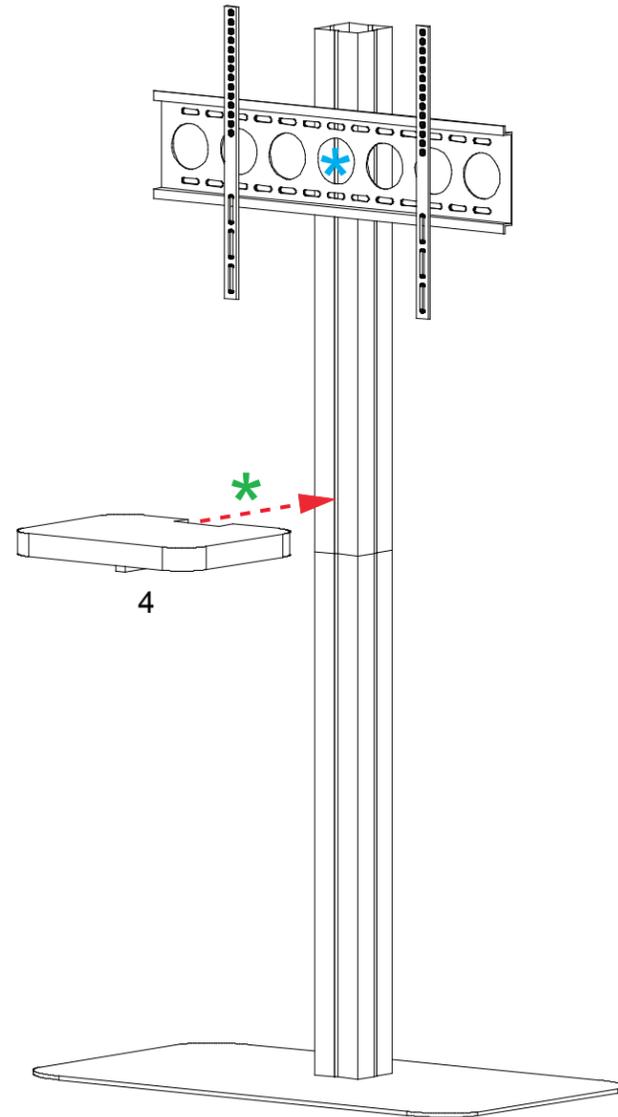
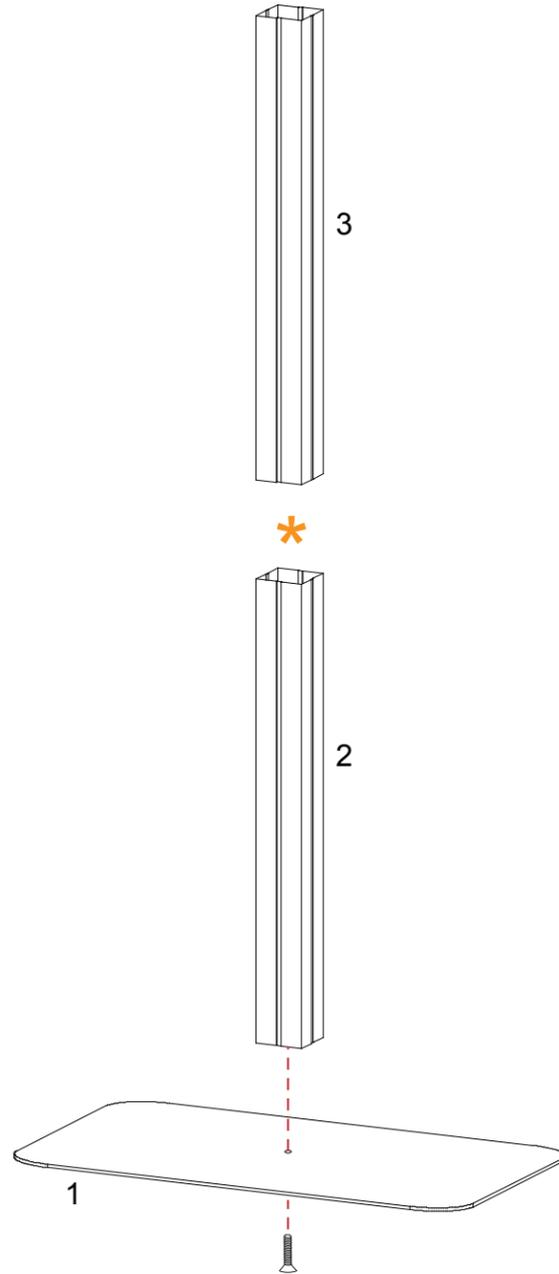
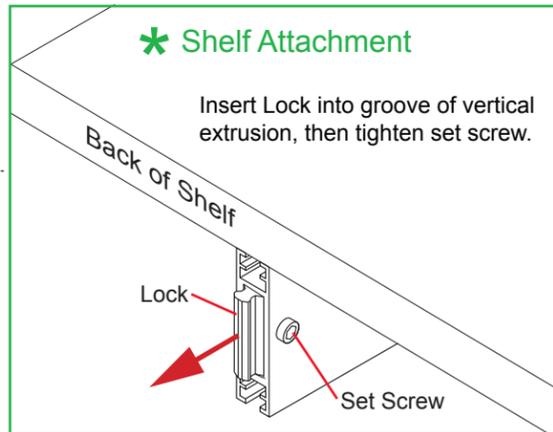


Item	Qty.	Description
1	1	Base Plate
2	1	34" h Q914 Vertical Extrusion
3	1	34" h Q914 Vertical Extrusion
4	1	8" w Z45 Horizontal Extrusion

**Steps:**

- 1) Connect verticals [2] & [3] together. See **Extrusion Connector** detail.
- 2) Attach base plate [1] to assembled verticals.
- 3) Connect Monitor Mount to assembled verticals.  
See **Monitor Mount Attachment** detail.
- 4) Connect Shelf [4] to assembled verticals. See **Shelf Attachment** detail.
- 5) Route cord thru Conduit. See **Cord Management** detail.

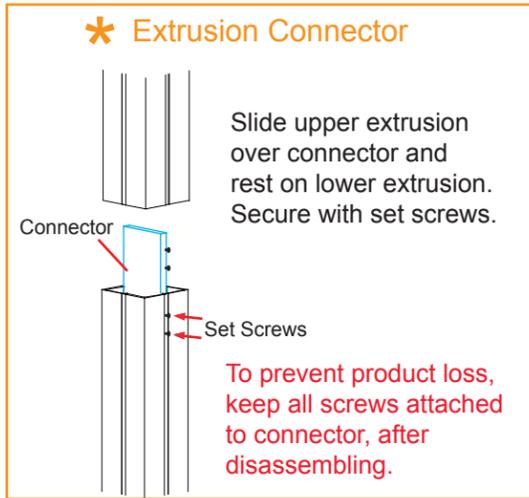

## General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

## Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure.  
**Heat and UV exposure will warp and fade components.**
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

## Disassembly


- For loss prevention, tighten all setscrews and locks during disassembly

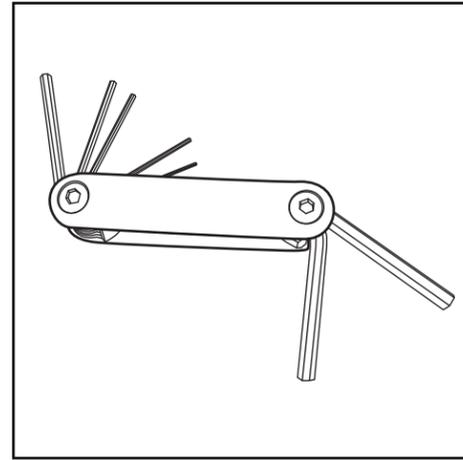


Hex Tool - Essential for Assembly

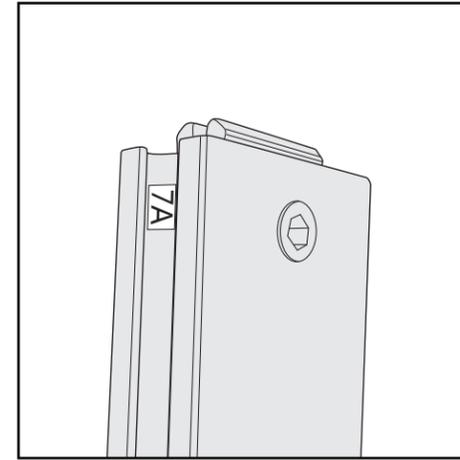


Part Identification - Numbering

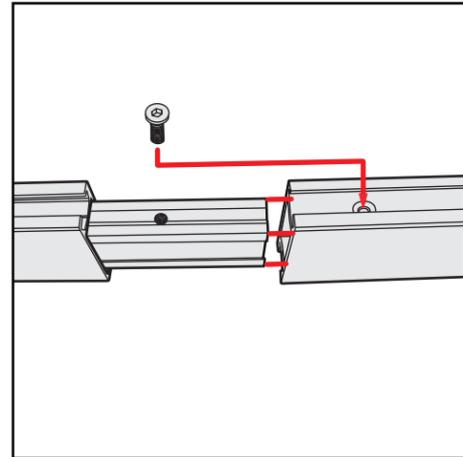


Spline Connection

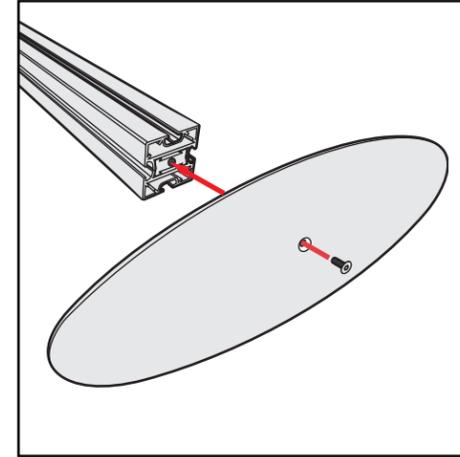

Base Plate & Extrusion Connection

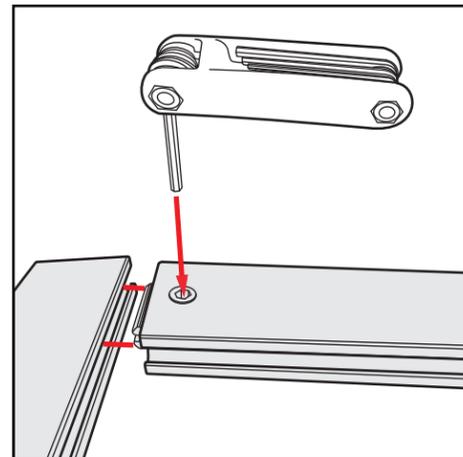

Extrusion & Lock Connection

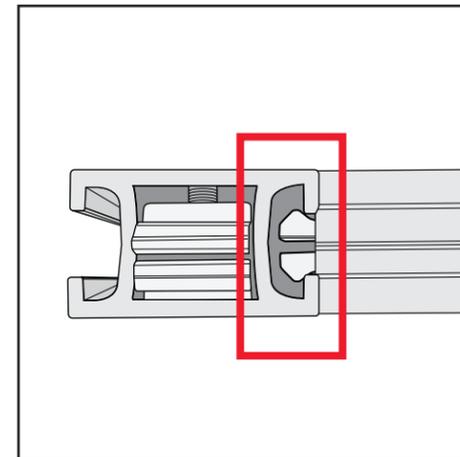

Engaged Lock



# WARNING



DO NOT USE POWER TOOLS



LADDERS OR LIFTS  
MAY BE REQUIRED



ALL CONNECTIONS MUST  
BE TIGHTLY SECURED

### Top View of Each Level

