


WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

Part Number	Qty	Description
1	1	39.84" Curved Vertical Extrusion
2	1	39.84" Curved Vertical Extrusion w/ A10 Clamp
3	1	39.84" Curved Vertical Extrusion w/ A10 Clamp
4	1	39.84" Curved Vertical Extrusion
5	4	17"w Horizontal Extrusion
6	3	17"w Horizontal Extrusion
6a	1	17"w Horizontal Extrusion w/ Door Stopper
7	1	17"w Horizontal Extrusion w/ Door Hinge

Steps:

- 1) Connect front and back assemblies together using horizontals [5], placing infill panels between verticals and horizontals.
- 2) Set internal shelf atop pins where indicated. (* Pins)
- 3) Attach wing panel to A10 clamps as shown
- 4) Set counter top atop pedestal base.

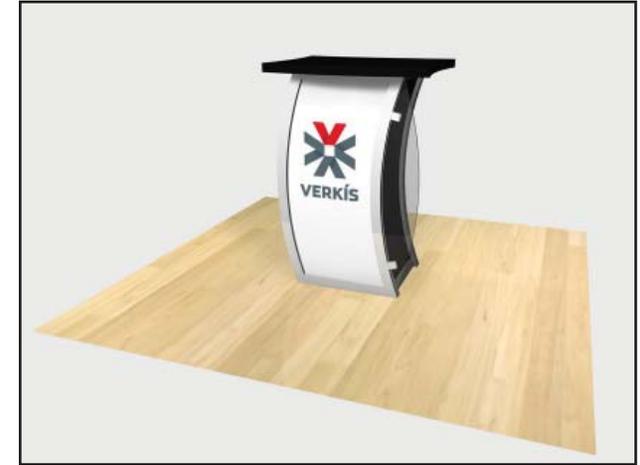

Front and Back section must remain assembled when shipping in cases

